


Normal Button Functions of the GyroMouse

Turn on the PC.

Place the GyroMouse in the cradle for approximately 8 seconds (GyroMouse MUST blink 5 or 6 times).

The GyroMouse has normal mouse functions regarding the left and right buttons.

Press and hold the activate button (underside) to bring up the arrow to move around as a pointer.

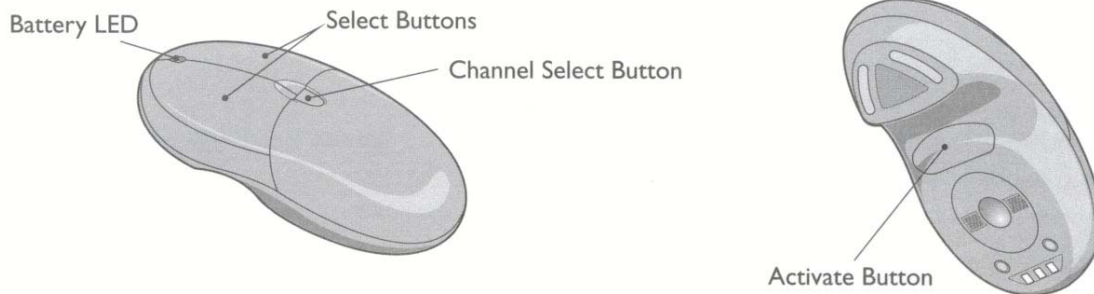

How to Use the Programmed buttons of the GyroMouse

Turn on the PC.

Place the GyroMouse in the cradle for approximately 8 seconds (Gyromouse MUST blink 5 or 6 times).

Go to Start --> Programs --> GyroTools

Open Gyro Tools.

Minimize Gyro Tools by pressing the minus sign at the top right corner of the window.

Begin using GyroMouse when ready.

- ❖ Left Click will advance to next slide in PowerPoint
- ❖ Right click and press the activate button at the same time. Hold both buttons for a Laser Pointer that you can move around.
- ❖ Right Click twice for Prev Pg (this will take you back a slide in PowerPoint).